

# Basic Range



## BA1- Voltage balance relay

### Application

Supervision of voltage unbalance in three-phase systems, phase failure, phase sequence and undervoltage.

### Function

The relay **BA1** measures amplitude and angle of three phase voltages. The angle of the phasors determine the phase sequence. Unbalance and phase loss are detected by the measurement of amplitude and angle. The undervoltage trip setting is 70% of  $U_n$  fixed.

$\Delta U$  characterizes the difference of the lowest to the highest phase-to-phase voltage related to nominal voltage. The underfrequency element trips if the frequency falls below 43.5 Hz.

### Technical data

Rated voltage $U_n$	: 110 V, 230 V, 400 V AC
Frequency range	: 43-66 Hz
Hysteresis	: 2% $U_n$
Tolerance	: $\pm 5\%$ of set value.
Power consumption	: 3 VA (4 VA BA1-400)
Thermal load carrying capacity	: continuously $1.3 \times U_n$
Returning time	: 600 ms
Minimum operating time	: 650 ms

### Output relay

Maximum breaking capacity ohmic	: 1250 VA AC/120 W DC
Inductive	: 500 VA AC/75 W DC
Rated current	: 5 A
Making current (16ms)	: 20 A

### System data

Regulations	: VDE 0435 Part 303
Temperature range at storage and operation	: $-25^\circ\text{C}$ to $+70^\circ\text{C}$

### Mechanical stress

Shock	: class 1 acc. to DIN IEC 255-21-2
Vibration	: class 1 acc. to DIN IEC 255-21-1
Degree of protection	: IP 40 at closed front cover
Weight	: approx. 0.5 kg
Mounting position	: any

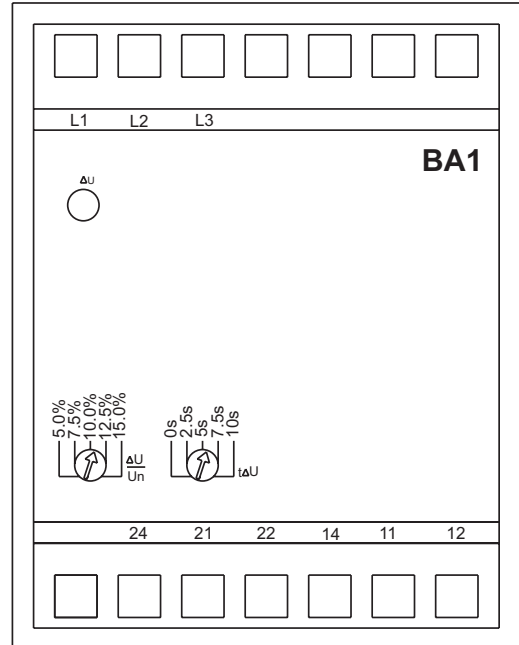


Fig. 1 : Front plate

The unit **BA1** is designed to be fastened onto a DIN rail acc. to DIN EN 50022 same as all units of the **BASIC RANGE**. The front panel of the unit is protected with a sealable transparent cover (IP40).

Please remove the transparent cover with a screw drive to adjust the relay.

### LED

LED  $\Delta U$  is used to indicate operation without fault with steady light. The LED indicates pickup of the relay by flashing. At tripping or underfrequency the LED  $\Delta U$  extinguishes.

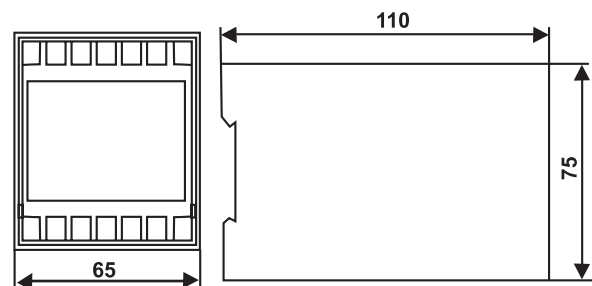


Fig. 2 : Dimensional drawing BA1



## Auxiliary voltage supply

The unit **BA1** needs no separate auxiliary voltage supply. The supply voltage can be formed directly from the measuring quantity.



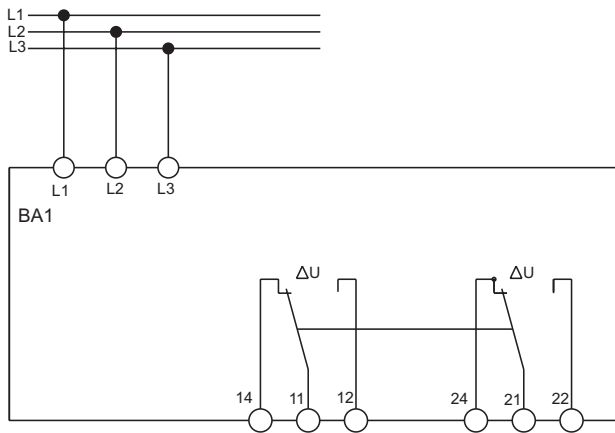


Fig. 3. Connection diagram

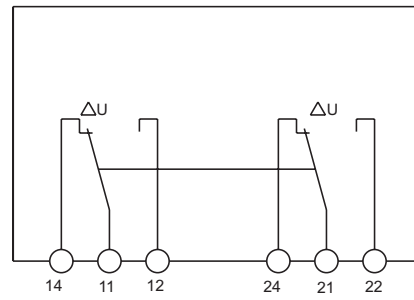

Unit dead, wrong phase sequence, underfrequency or tripped

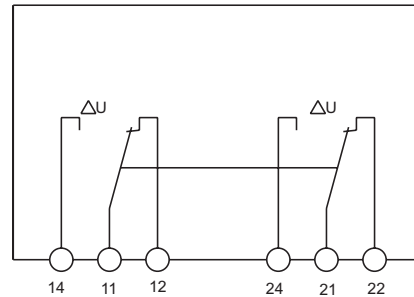

Operation without a fault

Fig. 4: Contact positions

## Connecting terminals

The connection up to a maximum of  $2 \times 2.5 \text{ mm}^2$  cross-section conductors is possible. For this the transparent cover of the unit has to be removed.

## Setting ranges

$\Delta U$  : 5 - 15 %  $U_n$   
 $t\Delta U$  : 0 - 10 s

## Order key

<b>BA1</b>	-	
Rated voltage 110 V AC		<b>110</b>
Rated voltage 230 V AC		<b>230</b>
Rated voltage 400 V AC		<b>400</b>

For further information, please contact :



## C&S Protection & Control Ltd.

44, Okhla Indl. Estate, New Delhi-110020, Ph.: 011-55602414, 26319465-66 Fax: 011-55602413 email: cspc@controlsindia.com

**Marketing Office : DELHI** : Ph.: 55602414, 26319465-66 Fax: 55602413 **CHANDIGARH** : Ph. 2776154, 2776151, 2726153 Fax: 2726154  
**KOLKATA** : Ph. 24549607-08 Fax: 24549371 **MUMBAI** : Ph.: 24114727-28 Fax : 24126631 **PUNE** : Ph.: 5444822-824, Fax: 5410820,  
**AHMEDABAD** : Ph.: 65841425, 6589132 Fax : 6589132 **BANGALORE** : Ph.: 5586147, 5323582, 5594939 Fax: 5582796,  
**CHENNAI** : Ph.: 26426475, 26426572 Fax: 26411972 **HYDERABAD** : Ph.: 27813003, 55332304 Fax: 27812987